

Part #	Model	Description:
114 094 0191	W114	094 BOOT
116 094 1291	W116	094 HOSE
110 094 0182	W110	094 Hose, Air Cleaner To Cam Box
110 094 2482	W110	094 Hose, Air Cleaner To R/Cover
116 094 0191	W116	094 Hose, Air Valve To Intake
116 094 1391	W116	094 Hose, Idle Air (Electronic)
001 094 2580	W116	094 LARGE RUBBER RING
110 094 0085	W110	094 Mount, Air Cleaner To Cam Box
114 094 0232	W114	094 Pipe In Manifold To Air Cleaner
110 130 1040	W110	130 Bracket, Nut
116 130 0460	W116	130 Pulley, Air Cond Idler
115 132 0140	W115	132 Bracket, Air Con
110 132 0051	W110	132 Space Washer
115 132 0053	W115	132 Spacer Tube
000 141 0825		141 Air Valve
123 141 0562	W123	141 AIR VALVE
000 141 1625		141 Air Valve, 420-500 SE, SEC, SEL
000 141 1325	W116	141 Air Valve, M116-962-963 380
000 141 1425	W117	141 Air Valve, M117-962-963 500SE
000 141 0325		141 Air, Valve Supplementary V8 "D" Jet
102 141 2780	W102	141 Gskt, Inlet Manifold Early 190 E
110 141 0080	W110	141 Gskt, Manifold Intake M110
000 141 1725	M102	141 Idle Control 3 Terminal
000 141 2225	M103	141 Idle Control Valve
000 141 0425	W110	141 Supplementary Air Valve
000 141 0625	W110	141 Supplementary Air Valve
000 141 0925		141 SUPPLMETRY AIR VALVE
110 142 1202	W110	142 Manifold Ex 1-3 RHD
110 142 4402	W110	142 Manifold Ex 4-6
130 142 0180	W130	142 Manifold Gskt
617 142 0380	W617	142 Manifold Gskt
615 142 0480	W615	142 Manifold Gskt
102 142 0180	W102	142 Manifold Gskt Ex
110 142 0380	W110	142 Manifold Gskt Ex
102 142 1480	W102	142 Manifold Gskt Ex
102 142 1580	W102	142 Manifold Gskt Ex No 4 Cyl
110 150 0011	W110	150 Gear, P/S Pump Belt Adj
121 150 0049	W121	150 Mount, Alternator
102 150 0118	M102	150 Plug lead sets ZEF466 4cyl
103 150 0118	M103	150 Plug lead sets ZEF558 6cyl
110 150 0118	M110	150 Plug Leads
123 150 0072	W123	150 Tightening Screw
110 150 0372	W110	150 Tightening Screw
000 151 1815		151 Armature, Starter
000 151 5314		151 Brush Set, Starter
000 151 5914		151 Brush Set, Starter
000 151 8114		151 Brush Set, Starter
000 151 4650		151 Bush, Starater Central
000 151 3650		151 Bush, Starter Central
000 151 0850		151 Bush, Starter Com End
000 151 1150		151 Bush, Starter Com End
000 151 3550		151 Bush, Starter Com End
000 151 1350		151 Bush, Starter Drive End
000 151 7313		151 Drive Starater

000 151 5813		151 Drive Starter
000 151 7113		151 Drive Starter
000 151 8313		151 Drive Starter
000 151 9613		151 Drive Starter
003 151 0701		151 Starter Motor 2.3KW
121 155 0181		155 Rubber Pad
000 156 5710	4/6	156 Suppressor (ZLE135) -124/201
000 156 5110		156 Suppressor, Spark Plug 1K
116 157 0350		157 Bush
104 158 0231	W140	158 Dist rotor m104
000 158		158 large dist V8 420 560
000 158 5850		158 Bush, Starter Armature Centre
000 158 5403	W124	158 Coil m103
000 158 8101		158 Condensor, Ign
103 158 0585	W103	158 Cover, Distributor Ignition
000 158 4502	W115	158 DIST CAP POSS 115
002 158 5301	M110	158 DIST M110 LARGE TERM
104 158 0102	W140	158 Distr cap m104 6CYL
000 158 3402		158 Distributor Cap
000 158 4202		158 Distributor Cap
000 158 2702		158 Distributor Cap NOTE 110-921
103 158 0002	W103	158 Distributor Cap "NOTE"
000 158 4902		158 Distributor Cap 4 Cyl M102 Late
000 158 2602		158 Distributor Cap 8 Cyl
000 158 4302		158 Distributor Cap M102 jay hook
000 158 4402		158 Distributor Cap M110 LATE
000 158 4002		158 Distributor Cap M123 3mm Terminals
000 158 3502		158 Distributor Cap M123 Early 7mm F emale
000 158 5850		158 HT Lead End Pce
000 158 2045		158 Resistor 0.4 Ohms
000 158 1345		158 Resistor 0.6 Ohms
000 158 3531		158 Rotor M110
103 158 0231		158 Rotor Arm
000 158 3631		158 Rotor Distributor
000 158 2231	M110	158 Rotor W114 -C- m110 rev limit
000 158 2631		158 Rotor, Distributor
000 158 4031		158 Rotor, Distributor
000 158 3931		158 Rotor, Distributor M102 Late
000 158 3431		158 Rotor, M102
000 158 2731		158 Rotor, M115 M123
000 159 143		159 Bracket HT Lead
110 159 0540		159 Bracket HT Lead
110 159 0640		159 Bracket HT Lead
000 159 6101		159 Glow Plug
000 159 8101		159 Glow Plug Quick Late 617-601 Series
115 159 0140		159 Holder
000 159 1438		159 HT Lead 3mm Thrd End
000 159 2742		159 HT Lead Angle Boot
000 159 2942		159 HT Lead To Coil Connector
000 159 8218		159 IGN cable (126)
003 159 0603		159 Spark Plug H7DC
110 160 0780	W110	160 Gskt, Cam Box 4 Bolt
116 180 0184	W116	180 TYPE HOLDER
201 540 3745	W201	540 over load protector
201 540 3245		540 Over voltage reg with fuse

116 540 0181	W116	540 Plug
124 540 1617	W124	540 Sensor ABS LF
124 540 1717	W124	540 Sensor ABS RF
001 540 7097		540 Valve, Solenoid
201 540 0317	W201	540 Warning Wire
140 540 1217	W140	540 Warning Wire
006 542 9417		542 Oil sender unit
126 542 0332	W126	542 Light Control
000 542 3625		542 Potentiometer (M1213)
002 542 1617		542 Pres Sensor
001 542 0219		542 Relay
001 542 4919		542 Relay, ABS Relay
002 542 2117		542 Sender, Temp Cyl to EFI
123 542 8307	W123	542 speedo cable
113 542 1007	W123	542 speedo cable rhd auto
113 542 1007		542 SPEEDO CABLE INNER & OUT
000 543 2534		543 GLOW PLUG FUSES
001 544 9532		544 Indicator Switch
000 545 4745		545
002 545 1205	W201	545 A/CON RELAY 4CYL
001 545 9832		545 Glow Plug Relay
006 545 4224	W201	545 Thermo switch 98deg to 90deg
006 545 1524	W124	545 THERMO SWITCH W124 -123 -210-126-14
124 880 0783		545 Air Con relay
002 545 1305		545 Air con relay 6CYL
008 545 2028		545 CONECTOR S SINGLE POLE
008 545 0828		545 Connector
009 545 4228		545 Connector
009 545 4328		545 Connector
008 545 1128		545 Connector Cover
008 545 0928		545 Connector, 2 Pole
006 545 8028		545 Connector, 6 Pole
008 545 1028		545 Connector, Cable
002 545 1926		545 Contact Spring
009 545 3028		545 Cover
004 545 4228		545 Cover, 2 Pole
000 546 9641		546 Block 3 Pole
000 546 1135		546 Boot, "D" Jet Inj.
000 546 7041		546 Connector, 2 Pole
000 546 6940		546 Terminal
000 546 7840		546 Wire Terminal
000 546 7940		546 Wire Terminal
126 820 4610	W126	820 Bench Seat Switch Rear
107 820 0510	W107	820 Blower, Switch
201 820 1110	W201	820 Door, Switch
123 820 0505	W123	820 Hazard Switch
000 820 9010		820 Hazard Switch
001 820 4242		820 Window, Lift 214
004 820 1442		820 Window, Lift 28
004 820 1542		820 Window, Lift 28 w126 r/h
001 820 9742	W201	820 Window, Lift Motor Front
001 820 9842	W201	820 Window, Lift Motor Front
004 820 5142	W124	820 Window, Lift Motor LF w124
004 820 5242	W124	820 Window, Lift Motor R
001 820 0542	W116	820 Window, Motor 28 Front Left

001 820 0442	W116	820 Window, Motor 28 Front Right
001 820 4342		820 Window, Motor Electric W126 r/f
124 820 4610	W124	820 Window, Switch
000 820 8210		820 Window, Switch Elect
000 820 8310		820 Window, Switch Elect Front
000 820 8410		820 Window, Switch Elect R/H
124 820 4510	W124	820 Window, Switch front right
001 821 4951		821 ELECTRIC WINDOW SWITCH
000 821 1063		821 Indicator Pulse Sender
201 821 0047	W201	821 Relay, Multi-Function
001 821 5051		821 Switch Elect Window
001 821 5051		821 Switch Elect Window
000 821 1552		821 Switch, Door
123 821 0063	W123	821 Wiper Pulse Sender
000 821 0863		821 Wiper Pulse Sender
000 860 0062		860 Non ReturnValve PVO Screen Washer
124 869 0521	W124	869 Washer Pump
124 869 0720	W124	869 Wind Screen Washer Bottle
115 869 0221		869 Window washer motor