

Part #	Model	Description:
110 016 0433	W110	016 Plate, Cover Cam Shaft Box Front
110 016 0721	W110	016 Seal, Cam Box Top
102 016 0421	M102	016 Tappet Cover Gasket m 102
110 016 0680		016 tappet cover gasket m110 twin/c
127 016 0860	W127	016 WATER DISTRIBUTOR
127 016 0460	W127	016 WATER DISTRUBTOR
001 017 2912		017 Nozzle, Injector
001 017 4612		017 Nozzle, Injector
001 017 4912		017 Nozzle, Injector
000 017 6912		017 Nozzle, Injector
615 017 0003	W615	017 Ring, Injector Retainer
111 018 0303	W111	018 Cap, Oil Filler Plastic
111 018 0302	W111	018 OIL CAPS STEEL NOT BLACK
110 030 0340	W110	030 Brg Set, Main Std
617 030 0540	W617	030 Brg Set, Main Std With Flange
116 030 0860	W116	030 Brg, Con Rod .25
617 030 0160	W617	030 Brg, Con Rod Set .25
617 030 0060	W617	030 Brg, Con Rod Set Std
116 030 0140	W116	030 Brgs, Main .25
616 030 6617	W616	030 Piston 91.5 Repair Size
001 030 2734		030 Piston Rings 91.00mm M616-617
103 030 0003	W103	030 Vibration Damper, Crank Shaft
102 031 0551	W102	031 Spacer, Crank Front Dbl Chain Row
603 032 0204	W603	032 Pulley, Poly Groove Crank Shaft
621 038 1150	W621	038 Bush, Gudgeon 29.00mm
615 050 1416		050 BELT GUIDE
102 050 0906	W102	050 CAM DIST DRIVE GEAR
601 050 0525	W601	050 Cam Follower Hydraulic Bucket
102 050 5501	W102	050 Cam Shaft Hydraulic
102 050 0201	W102	050 Cam Shaft, Mechanical Repairs
116 050 0480	W116	050 Compensator, Hydraulic Clearance V8
110 050 0206	W110	050 Drive Gear Set, Oil Pump
130 050 0306	W130	050 Drive, Oil Pump M616-617
103 050 0080	W103	050 Element, Hydraulic Clearance
102 050 0906	W102	050 Gear Idle, Intermediate Duplex
116 050 0205	W116	050 Gear Timing
108 050 0724	W108	050 Guide, Exhaust
116 050 4124	W116	050 Guide, Exhaust 11mm Stem
108 050 0624	W108	050 Guide, Exhaust Valve
103 050 2724	W103	050 Guide, Exhaust Valve
116 050 5324	W116	050 Guide, Exhaust Valve
110 050 6524	W110	050 Guide, Exhaust Valve
102 050 1824	W102	050 Guide, Exhaust Valve 14.05
110 050 5924	W110	050 Guide, Exhaust Valve 9mm
110 050 2624	W110	050 Guide, Inlet 14.04
130 050 0124	W130	050 Guide, Inlet Valve
116 050 4724	W116	050 Guide, Inlet Valve
102 050 8924	W102	050 Guide, Inlet Valve
102 050 1724	W102	050 Guide, Inlet Valve 14.03mm DA
110 050 1516	W110	050 Guide, Timing Chain
103 050 2224	W103	050 Guide, Valve Intake 14.04
110 050 0020	W110	050 Pivot
130 050 0574	W130	050 Pivot

615 050 0233	W615	050 Rocker Arm
102 050 0633	W102	050 Rocker Arm For Hydraulic Lifters
110 050 0071	W110	050 Screw Intermediate Gear
102 050 0806	W102	050 Shaft With Gear Simplex
102 050 0816	W201	050 Slide rail single row m102
621 050 0409	W621	050 Sprocket Idler M615-617
102 050 0158	W102	050 Stem Seal Kit
103 050 0158	W103	050 Stem Seal Valve Kit
617 050 0067	W617	050 Stem Seal Valve Kit
103 050 0611	W103	050 Tensioner Chain
116 050 1811	W116	050 Tensioner, Chain ADJ
110 050 0611	W110	050 Tensioner, Timing Chain
615 050 0611	W615	050 Tensioner, Timing Chain
115 050 0911	W115	050 Tensioner, Timing Chain
102 050 1011	W102	050 Tensioner, Timing Chain
115 050 1011	W115	050 Tensioner, Timing Chain
116 050 1611	W116	050 Tensioner, Timing Chain
102 050 1216	W102	050 Tensioning Rail
103 050 0316	W103	050 Tensioning Slide Rail
103 050 527	W103	050 Valve Exhaust
110 050 0027	W110	050 Valve, Exhaust
115 050 0027	W115	050 Valve, Exhaust
116 050 0027	W116	050 Valve, Exhaust
616 050 0027	W616	050 Valve, Exhaust
117 050 0027	W117	050 Valve, Exhaust
102 050 0327	W102	050 Valve, Exhaust
116 050 0426	W116	050 Valve, Inlet
617 051 1101	W617	051 Cam Shaft
116 052 1616	W116	052 RAIL PIN BOLTS
116 052 0350	W116	052 Bush
116 052 0601	W116	052 CAM GEAR
130 052 0001	M110	052 CAM GEAR M110
115 052 0416	W115	052 Chain Guide
110 052 0816	W110	052 Chain Guide
116 052 1716	W116	052 Chain Guide
`116 052 1716	W116	052 CHAIN GUIDE
102 052 0416	W102	052 Chain Guide Cyl HD Simplex
102 052 1416	W102	052 Chain Guide Duplex
116 052 0083	W116	052 CHAIN SLIDE
121 052 0201	W121	052 Gear, Cam Shaft
121 052 0301	W121	052 Gear, Cam Shaft
102 052 0901	W102	052 Gear, Cam Shaft Duplex
102 052 0201	W102	052 Gear, Cam Shaft Simplex
102 052 0103	W102	052 Gear, Crank Duplex
615 052 0103	W615	052 Gear, Crank Shaft
615 052 0203	W615	052 Gear, Crank Shaft
110 052 02	W110	052 Gear, Crank Shaft Timing
102 052 0003	W102	052 Gear, Crank Simplex
180 052 0903	W180	052 Gear, Timing Crank Shaft
130 052 0002	W130	052 Gear, Timing Guide
102 052 0174	W102	052 Pin 62mm Chain Guide
117 052 0816	W117	052 Rail Guide in Head
117 052 0916	W117	052 Rail Guide in Head
102 052 1316	W102	052 Rail, Chain Duplex
102 052 0316	W102	052 Slide Rail

616 053 0330	W616	053 Guide, Valve Exhaust 14.00mm
616 053 0329	W616	053 Guide, Valve Intake 14.00mm
621 053 0172	W621	053 Nut, Adj Tappet Early
615 053 0072	W615	053 Nut, Adj Tappet Late
000 053 3558		053 Seal, Stem Valve 9mm
110 053 1732	M110	053 SPACERS
000 053 1858		053 Stem Seal, Exhaust 11 mm
000 053 1985		053 Stem Seal, Inlet 9mm
130 053 0353	W130	053 Thrust Pce Std 4.5mm
616 053 0301	W616	053 Valve Inlet
103 053 0401	W103	053 Valve Inlet
102 053 1701	W102	053 Valve Inlet
110 053 1132	W110	053 Valve Seat, Exhaust
110 053 1231	W110	053 Valve Seat, Exhaust
123 053 0001	W123	053 Valve, Inlet
103 055 0224	W103	055 Ball Seat, Hyd Compensator 3.5mm Thk
103 055 0024	W103	055 Ball Seat, Hyd Element 3.0mm Thk
116 055 1501	W116	055 Rocker Arm
114 055 0001	W114	055 Rocker Arm
615 055 0201	W615	055 Rocker Arm
110 055 0901	W110	055 Rocker Arm
102 055 0001	W102	055 Rocker Arm Manual Adj pair
617 055 0005	W617	055 Shaft, Rocker Arm
102 055 0605	W102	055 Shaft, Rocker Arm
110 055 1193	W110	055 Spring, Rocker Arm
103 055 0676	W103	055 Washer 1.8 Thk
103 055 0776	W103	055 Washer, Hyd Compensator 1.5mm Thk
103 055 0976	W103	055 Washer, Hyd Compensator 2.2mm Thk
000 070 2862		070
000 070 1562		070 Warm up Reg
117 070 0284	W117	070 Ball Pivot Insert
000 070 2947		070 Choke Tn 4A1 Solex
000 070 4452		070 Diaphragm Accel Pump 4A1
000 070 5052		070 Diaphragm Choke Pulldown CD175
000 070 1853		070 Diaphragm Fuel Shutoff
000 070 1067		070 Diaphragm, 2nd Barrel Pulldown
000 070 2453		070 Diaphragm, Fuel Shutoff
000 070 2953		070 Diaphragm, Vacuum Control 4A1
116 070 0077	W116	070 GUIDE TUBE
116 070 0077		070 Injector Guide (Seal) "K" Late
117 070 0055	W117	070 Injector Guide Nylon
117 070 0055	W117	070 Injector Guide Nylon
110 070 0062	W110	070 Regulator, Warm Up
102 070 0162	W102	070 Regulator, Warm Up
000 070 2062		070 Regulator, Warm Up
116 070 0062	W116	070 Regulator, Warm Up
116 070 0062	W116	070 Regulator, Warm Up (NOTES)
000 070 2053		070 Shut Off, Fuel Diesol Late 617-616
102 070 0074	W107	070 SPEEDO FITTING OR CABLE
000 017 3337		071
000 071 3337		071 START VALVE 0 280 170 023
000 071 3428		071 Choke Automatic 4A1
000 071 0826		071 Diaphragm 175 CD Stromberg
000 071 0726		071 Diaphragm, Choke Pulldown 4A1
123 071 0180	W123	071 Insulator 4A1 Carb

][poiuytrewq		
000 071 3024	W110	071 Insulator 4A1 Carb
000 071 0194		071 Link Adj 175 CD Stromberg
000 071 0294		071 Seat, Needle Valve 4A1
115 072 0450	W115	071 Seat, Valve Fuel Shutoff
180 072 0393	W180	072 Bush, Tophat Plastic
110 072 0038	W110	072 Roller, Throttle Linkage
000 072 1717		072 Shackle, Throttle Linkage
116 077 0950	W116	072 Valve, Fuel Return
116 077 0950	W116	077 BRASS BUSH
000 078 0292		077 Bush
000 078 5623		078 Damper Fuel Pres
000 078 5723		078 Injector "K" Jet
116 078 0473	W116	078 Injector "K" Jet " note"
116 078 0073	W116	078 Injector Guide Nozzle "D" Jet
116 078 0873	W116	078 Injector Seal
000 078 0389		078 Injector Seal, "K" Jetronic
000 078 0592		078 Pres Reg
000 078 0392		078 Pressure Damper, "K" Jet
180 080 0574	W180	078 Regulator, Pressure KE 200-300
126 300 0085	W126	080 Pivot, Ball M121-180
124 300 2503	W124	300 Ball Pivot Throttle Linkage
123 300 0204	W123	300 Cable, Accelerator
123 300 0140	W123	300 Pedal, Accelerator
126 300 0540	W126	300 Pivot, Throttle Shaft
202 301 0093	W202	300 Pivot, Throttle Shaft
107 301 0040	W107	301 Guide, Throtle Cable at Firewall
000 304 2890		301 Pedal Lock, Accelerator
617 586 1205	W617	304 Support
000 586 1823		586 Bearing Kit, Cam Shaft
000 586 0843		586 Repair Kit, Rocker Arm
000 586 4143		586 Repair Kit, Rocker Arm
124 830 0670	W124	586 Vac. Pump Kit
124 830 1670	W124	830 Condensor A/C
126 830 0383	W126	830 Condensor A/C
126 830 0084	W126	830 Dryer A/C
000 830 1884		830 Faucett
000 830 6584		830 Faucett Electric
123 830 2084	W123	830 Faucett Electric Dual
123 830 0537	W123	830 Heater Faucett
123 830 0372	W123	830 Switch, A/C
115 831 0001	W115	830 Temp Sender
107 833 0240	107	831 Handle, Vent
107 833 0204	W107	833 HEATER HANDLE R/C 107
140 835 0547	W140	833 Heater Switch Slide
000 835 0081	W110	835 Cabin filter w140
000 835 0080		835 Manifold Stud 8mm
000 835 8064		835 Manifold Stud 8mm
085 836 027		835 Pump, Hot Water
123 997 0386	W123	836 Bush Holder, Starter
123 997 1681	W123	997 Blanking Plug
114 997 0290	W114	997 Boot, Wire Terminal On Elect Pump
126 997 0486	W126	997 Cable Tie
002 997 0394		997 Cap Plastic
001 997 3094		997 Chain Duplex Incl. Link M102
		997 Chain Timing M615-617

000 997 1498		997 Chain, Simplex Link M102, M103
000 997 6994		997 Chain, Timing (Link Belt) M110 Duplex
002 997 9492		997 Chain, Timing M601, 602, 603
001 997 7094		997 Chain, Timing Single Row
006 997 1247		997 front oil seal m102 see 009 997 3547
002 997 0394		997 M102 TWIN TIMMING CHAIN
116 997 0072	W116	997 Nipple, 12 x 1.5 x 8mm Tube
110 997 1672	W110	997 Nipple, 12 x 1.5 x 8mm Tube
110 997 1572	W110	997 Nipple, 18 x 1.5 x 15mm Tube
601 997 0230	W601	997 Plug 14 x 1.5 x 24mm Longw124
115 997 0032	W115	997 Plug 24mm Diff Filler
116 997 0886	W116	997 Plug 6.3mm Hole
186 997 0032	W186	997 Plug Drain Diff 24mm
180 997 0630	W180	997 Plug Hex Hd 26mm
123 997 0430	W123	997 Plug Sump 12 x 1.5 x 13 SW
130 997 0032	W130	997 Plug Sump 26mm
003 997 4440		997 Ring "O" Seal Ex Flange
116 997 0045		997 Ring Aircleaner Holdown
001 997 1841		997 Ring, Deal Exhaust Pipe
181 997 0341	W181	997 Ring, Seal Bowl To Body
123 997 0781	W123	997 RUBBER COVER
114 997 0130	W114	997 Screw Plug, Cyl Head
014 997 6747		997 Seal
005 997 8747		997 Seal
009 997 1048		997 Seal Ring
018 997 7947		997 Seal, Cam Housing Front M103
018 997 1947		997 Seal, Crank Shaft Front
014 997 6247		997 Seal, Diff Side
005 997 5046		997 Seal, Front Hub 107,114,115
005 997 4447		997 Seal, Front Hub 123-1126 With ABS
011 997 5147		997 Seal, Front Hub Oil M124-M201
010 997 6547		997 Seal, Front Wheel Hub
001 997 6747		997 Seal, LS90 P/S Worm Shaft
001 997 1241		997 Seal, Main Brg Rear
011 997 6746		997 Seal, Oil
010 997 4947		997 Seal, Oil Auto G/Box Front
004 997 0547		997 Seal, Oil Auto Trans
008 997 9146		997 Seal, Oil Auto Trans Front
012 997 8747		997 Seal, Oil Auto Trans Rear 722.1
009 997 3547		997 Seal, Oil Crank Shaft Front
009 997 4547		997 Seal, Oil Crank Shaft Front
020 997 2147		997 Seal, Oil Diff Pinion 115-124
003 997 9346		997 Seal, Oil Front Hub M108-109
010 997 6747		997 Seal, Oil Front Hub W/out Abs
019 997 5147		997 Seal, Oil LS90 Etc Worm Shaft
007 997 3547		997 Seal, Oil Rear Hub Inner
001 997 0646		997 Seal, Oil, Rear Hub Outer
018 997 6047		997 Seal, Power Steer Pump ZF
001 997 3436		997 Seal, Rear Hub Inner M108 Etc
001 997 4746		997 Seal, Rear Wheel Outer M108 Etc
009 997 0147	W201	997 Seal, S/Box Sector Shaft M102
006 997 8246		997 Seal, Sector Shaft LS90 P/S
112 997 0281	W112	997 Sleeve For Tube Clamp
004 997 0147		997 small seal
001 997 6994	M103	997 Timming Chain m103

000 997 6994
002 997 3092

997 TIMMING CHAIN M110
997 V Belt